

HYTORC

TOOL MODEL: EDGE-8 PRESSURE/TORQUE CONVERSION CHART

Standard Torque Chart

PRESSURE IN PSI	TORQUE IN			PRESSURE IN BAR
	FT. LBS.	KGM	NM	
1500	1230	170	1667	104
1600	1314	182	1781	110
1800	1482	205	2009	124
2000	1650	228	2237	138
2200	1821	252	2469	152
2400	1992	275	2700	165
2600	2163	299	2932	179
2800	2334	323	3164	193
3000	2505	346	3396	207
3200	2675	370	3626	220
3400	2845	393	3857	234
3600	3015	417	4087	248
3800	3185	440	4318	262
4000	3355	464	4548	276
4200	3526	488	4780	290
4400	3697	511	5012	303
4600	3868	535	5243	317
4800	4039	559	5475	331
5000	4210	582	5707	345
5200	4383	606	5942	358
5400	4556	630	6176	372
5600	4729	654	6411	386
5800	4902	678	6645	400
6000	5075	702	6880	414
6200	5249	726	7116	427
6400	5423	750	7351	441
6600	5597	774	7587	455
6800	5771	798	7823	468
7000	5945	822	8059	482
7200	6117	846	8292	496
7400	6289	870	8525	510
7600	6461	894	8759	524
7800	6633	917	8992	538
8000	6805	941	9225	552
8200	6979	965	9461	565
8400	7153	989	9697	579
8600	7327	1013	9932	593
8800	7501	1037	10168	607
9000	7675	1061	10404	620
9200	7851	1086	10643	634
9400	8027	1110	10881	648
9600	8203	1134	11120	662
9800	8379	1159	11359	676
10000	8555	1183	11597	690