



HYTORC[®]

Since 1968

2nd 1103

Tool Model: XXI-3
Pressure/Torque Conversion Chart

PRESSURE IN: PSI	TORQUE IN:			PRESSURE IN: BAR
	ft-lbs	KGM	NM	
1500	475	66	644	104
1600	511	71	693	110
1800	583	81	790	124
2000	655	91	888	138
2200	724	100	981	152
2400	793	110	1075	165
2600	862	119	1169	179
2800	931	129	1262	193
3000	1000	138	1356	207
3200	1069	148	1449	220
3400	1138	157	1543	234
3600	1207	167	1636	248
3800	1276	176	1730	262
4000	1345	186	1823	276
4200	1415	196	1918	290
4400	1485	205	2013	303
4600	1555	215	2108	317
4800	1625	225	2203	331
5000	1695	234	2298	345
5200	1762	244	2389	358
5400	1829	253	2479	372
5600	1896	262	2570	386
5800	1963	271	2661	400
6000	2030	281	2752	414
6200	2094	290	2839	427
6400	2158	298	2925	441
6600	2222	307	3012	455
6800	2286	316	3099	468
7000	2350	325	3186	482
7200	2416	334	3275	496
7400	2482	343	3365	510
7600	2548	352	3454	524
7800	2614	362	3544	538
8000	2680	371	3633	552
8200	2736	378	3709	565
8400	2792	386	3785	579
8600	2848	394	3861	593
8800	2904	402	3937	607
9000	2960	409	4013	620
9200	3016	417	4088	634
9400	3072	425	4164	648
9600	3128	433	4240	662
9800	3184	440	4316	676
10000	3240	448	4392	690

Hytorc West

<http://www.hytorcwest.com>

Important Safety Instructions

WARNING: Your **HYTORC TORQUE MACHINE** is a power tool, and as with any power tool, certain safety precautions should be observed to avoid accidents or personal injury. The following tips will assist you.

- **READ ALL INSTRUCTIONS.**
- **KEEP WORK AREA CLEAN AND WELL LIT.**
- **CONSIDER WORK AREA ENVIRONMENT.** Electrical Pumps should never be used in any atmosphere which can be considered potentially volatile. If there is any doubt, use an air pump. Also Note: metal to metal contact can cause sparks, precautions should be taken.
- **AVOID PREMATURE TOOL STARTING.** The Pump Remote Control is for the TOOL OPERATOR only.
- **STAY CLEAR DURING OPERATION.** In most cases, the tool will allow “hands free” operation. If the tool must be held or steadied during operation, use alternative means of securing the tool to the application.
- **GUARD AGAINST ELECTRIC SHOCK.** Ensure the pump is properly grounded and the proper voltage is being used.
- **STORE IDLE TOOLS.** When not in use, tools and accessories should be properly stored to avoid deterioration.
- **USE RIGHT TOOL.** Don't force small tools or attachments to do the job of a larger tool. Don't use tool for purposes not intended.
- **PROPER SAFETY ATTIRE.** When handling/operating hydraulic equipment, use work gloves, hard hats, safety shoes and other applicable clothing.
- **USE SAFETY GLASSES.**
- **Moving equipment.** Do not use hydraulic hoses, uniswivels, pump power or remote cords as means of moving the equipment.
- **MAINTAIN TOOLS WITH CARE.** For top performance, inspect tool, powerpack and accessories for visual damage frequently and always prior to use. Always follow instructions for proper tool and pump maintenance. Refer to the Operations maintenance Section for further clarification.
- **STAY ALERT.** Watch what you are doing. Use common sense. Do not use power equipment under the influence of any mood altering substances.
- **PRIOR TO OPERATION.**
Ensure that all hydraulic connections are securely connected and there is no leakage.
Verify that the hydraulic hoses are not kinked or otherwise damaged.
Insure the square drive and its retainer is fully and securely engaged.
Ascertain that all connectors, elbows, fittings and swivels are not bent, loose or damaged.
- **PRIOR TO USE.**
Check Sockets for size, quality and flaws. (Do not use if question able.)
Cycle tool to ensure proper function.
Locate a solid, secure reaction point.
Be sure the reaction arm retaining clamp is fully engaged.
Be sure the hydraulic hoses are free of the reaction point.
Pressurize the system momentarily if the tool tends to “ride up” or to “creep”, stop and re-adjust the reaction arm to a more solid and secure position.

NOTE: Remain clear of the reaction arm during operation and never put body parts between reaction arm and reaction surface.
- **ALWAYS USE QUALITY ACCESSORIES.** Always use top quality impact sockets in good condition which are the correct size and fully engage the nut. Hidden flaws, however, remain a possibility which could cause break, so stay clear of sockets during operation.
- **DO NOT USE** other equipment to enhance performance. (Hammer on Socket/Tool)
- **NOTE:** HYTORC Pumps are designed to operate HYTORC Tools only. Damage may occur to the pump or product that is being operated due to misuse.

SAVE THESE INSTURCTIONS FOR FUTURE USE!