

Y3 Torque Chart

Pressure In PSI	Torque			Pressure In Bars
	FT.LBS.	KGM	NM	
1500	403	56	546	104
1600	430	60	583	110
1800	484	67	656	124
<hr/>				
2000	550	76	746	138
2200	606	84	821	152
2400	661	92	896	165
2600	716	99	971	179
2800	771	107	1045	193
<hr/>				
3000	849	118	1151	207
3200	906	126	1228	220
3400	963	134	1305	234
3600	1019	142	1381	248
3800	1076	149	1459	262
<hr/>				
4000	1152	160	1562	276
4200	1210	168	1640	290
4400	1268	176	1719	303
4600	1325	184	1796	317
4800	1383	192	1875	331
<hr/>				
5000	1457	202	1975	345
5200	1516	211	2055	358
5400	1574	219	2134	372
5600	1632	227	2212	386
5800	1690	235	2291	400
<hr/>				
6000	1759	244	2385	414
6200	1818	253	2464	427
6400	1876	261	2543	441
6600	1935	269	2623	455
6800	1994	277	2703	468
<hr/>				
7000	2071	288	2807	482
7200	2130	296	2887	496
7400	2189	304	2967	510
7600	2248	312	3047	524
7800	2307	320	3127	538
<hr/>				
8000	2373	330	3217	552
8200	2433	338	3298	565
8400	2492	346	3378	579
8600	2551	354	3458	593
8800	2611	363	3539	607
<hr/>				
9000	2678	372	3630	620
9200	2738	380	3712	634
9400	2797	388	3792	648
9600	2857	397	3873	662
9800	2916	405	3953	676
10000	2985	415	4047	690

IMPORTANT SAFETY INSTRUCTIONS

WARNING: Your **HYTORC TORQUE MACHINE** is a power tool, and as with any power tool, certain safety precautions should be observed to avoid accidents or personal injury. The following tips will assist you.

- **READ ALL INSTRUCTIONS.**
- **KEEP WORK AREA CLEAN AND WELL LIT.**
- **CONSIDER WORK AREA ENVIRONMENT.** Electrical Pumps should never be used in an atmosphere which can be considered potentially volatile. If there is any doubt, use an air pump. Also Note: metal to metal contact can cause sparks, precautions should be taken.
- **AVOID PREMATURE TOOL STARTING.** The Pump Remote Control is for the **TOOL OPERATOR** only.
- **STAY CLEAR DURING OPERATION.** In most cases, the tool will allow “hands free” operation. If the tool must be held or steadied during operation, use alternative means of securing the tool to the application
- **GUARD AGAINST ELECTRIC SHOCK.** Ensure the pump is properly grounded and the proper voltage is being used.
- **STORE IDLE TOOLS.** When not in use, tool and accessories should be properly stored to avoid deterioration
- **USE RIGHT TOOL.** Don't force small tools or attachments to do the job of a larger tool. Don't use a tool for purposes not intended.
- **PROPER SAFETY ATTIRE.** When handling/operating hydraulic equipment use work gloves, hard hats, safety shoes and other applicable clothing.
- **USE SAFETY GLASSES.**
- **MOVING EQUIPMENT.** Do not use hydraulic hoses, uni-swivels, pump power or remote cords as means of moving the equipment.
- **MAINTAIN TOOLS WITH CARE.** For top performance, inspect tools, powerpack and accessories for visual damage frequently and always prior to use. Always follow instruction for proper tool and pump maintenance. Refer to the Operations Maintenance Section for further clarification
- **STAY ALERT.** Watch what you are doing. Use Common sense. Do not use power equipment under the influence of any mood altering substances.
- **PRIOR TO OPERATION**
Ensure that all hydraulic connections are securely connected and there is no leakage
Verify that the Hydraulic hoses are not kinked or otherwise damaged.
Ensure the square drive and its retainer are fully and securely engaged.
Be certain that all connectors, elbows, fitting and swivels are not bent, loose or damaged.
- **PRIOR TO USE.**
Check sockets for size, quality and flaws. (Do not use if questionable)
Cycle tool to ensure proper function.
Locate a solid, secure reaction point.
Be sure the reaction arm retaining clamp is fully engaged.
Be sure the hydraulic hoses are free of the reaction point.
Pressurize the system momentarily; if the tool tends to “ride up” or to “creep”, stop and re-adjust the reaction arm to a more solid and secure position.

NOTE: Remain clear of the reaction arm during operation and never put body parts between reaction arm and reaction surfaces.

- **ALWAYS USE QUALITY ACCESSORIES.** Always use top quality impact sockets in good condition which are the correct size and fully engage the nut. Hidden flaws, however, remain a possibility which could cause breakage, so stay clear of sockets during operation
- **DO NOT USE** other equipment to enhance performance (Hammer on Socket/Tool)

NOTE: Hytorc Pumps are designed to operate Hytorc Tools only. Damage may occur to the pump or the product that is being operated due to misuse.

SAVE THESE INSTRUCTIONS FOR FUTURE USE!